


Repairing Loose Bricks & Re-pointing on Under Side of Brick Arches

CF-15

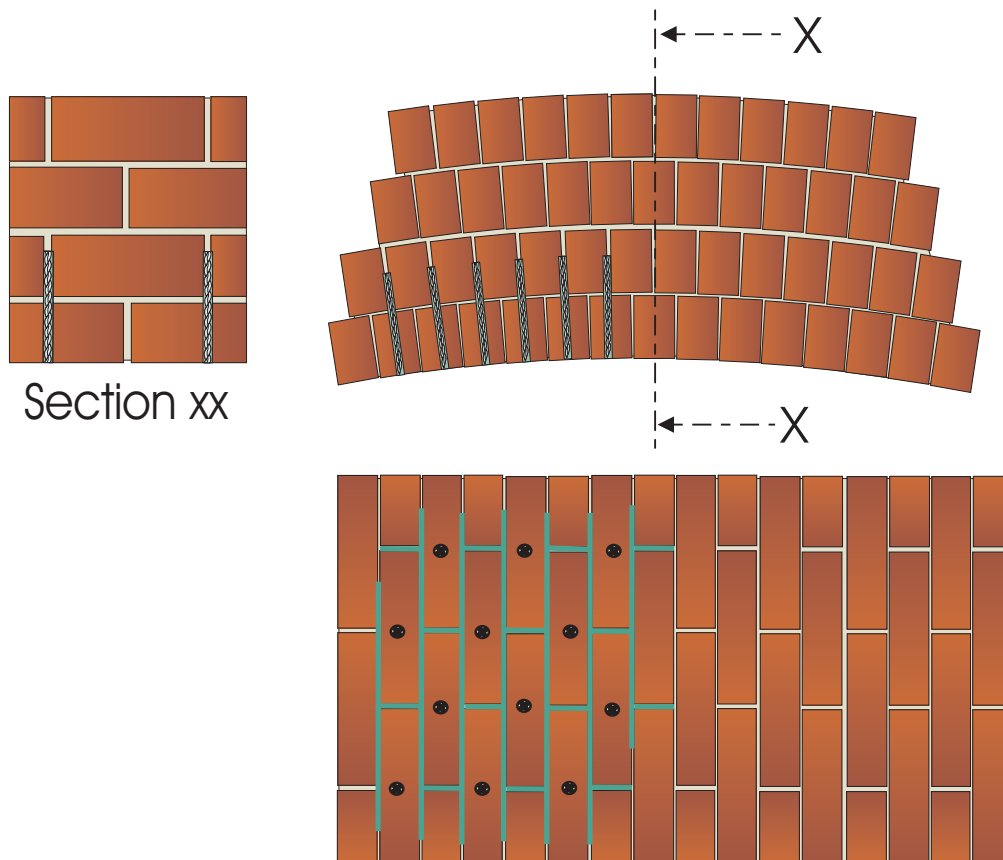

- (1) Mark positions of loose bricks which require Cem-fixing.
- (2) Drill clearance holes (13mm-14mm diameter depending upon material and length of tie to be used) in centre of brick to specified depth.
- (3) Blow out holes and thoroughly flush with water.
- (4) With the aid of a grout gun fitted with correct size of nozzle, pump Cemspand cementitious grout to outlet of nozzle. Insert nozzle to full depth of drilled hole and pump grout to fill hole. Maintain pressure on gun while retrieving nozzle to ensure that all voids are filled with grout.
- (5) Wind correct length Cem-fix into hole using Fast-fix support tool. Make good all holes at surface with colour matching dyed mortar.
- (6) After 24 hours rake out and re-point around bricks that have been Cem-fixed. Using Cemspand and grout gun

Installation Notes: Unless specified otherwise the following criteria are to be used.

- a) Cem-fix depth to penetrate 70 mm into sound brickwork .