

## End of joist method

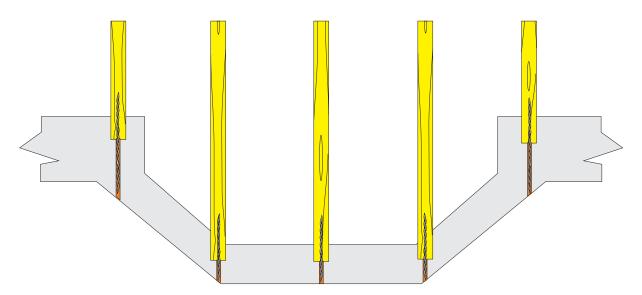

Use Bow-Fix detail BF-01 to tie joist ends which run perpendicular to front elevation of Bays



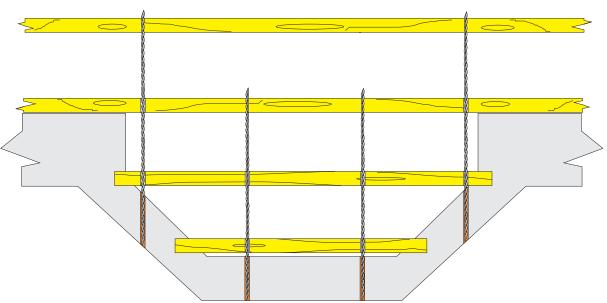

Use Bow-Fix detail BF-02 to tie joists which run parallel to front elevation of Bays

<u>NOTE:</u> Further additional repair methods may well be required depending on the condition of the bay masonry. See repair methods TB14, to TB16 and CF12.